

5 LCD Display

The LCD display screen will display realtime status of the outboard or deliver warning messages during operation.

5.1 Display introduction

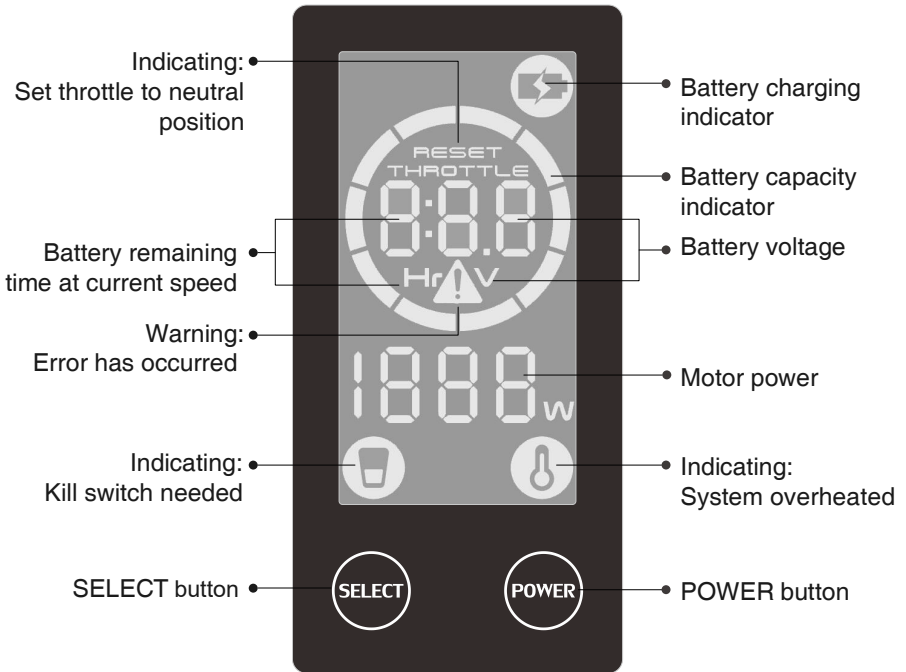




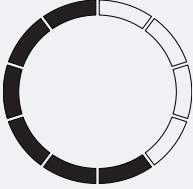






Figure 5-1

Button	Function
	In power off state, long press "POWER" button (≥ 2 secs) to power on the motor. Repeat this operation to power off.
	In power on state, press the "SELECT" button to switch the display between "Battery remaining time" and "Battery voltage". In power on state, long press "SELECT" button (≥ 10 secs) to enter throttle calibration mode.

Icon	Function
	<p>This icon will display when the battery is charging.</p>
	<p>This icon shows the state of battery charge, the solid circular section indicates the percentage ratio of the residual battery. e.g.</p> <div style="display: flex; justify-content: center; align-items: center; gap: 20px;">  </div> <p style="text-align: center;">60% battery reserved</p> <p>All the 10 blocks will be blinking when the remaining battery is less than 5%. Steer your boat to shore or wharf as soon as possible, and fully charge the battery in time.</p>
	<p>This icon will display when some error has occurred. An error code will also display. Please refer to the error codes list to troubleshoot errors. e.g.</p> <div style="display: flex; justify-content: center; align-items: center; gap: 20px;">  </div> <p style="text-align: center;">Error code: E01</p>
	<p>This icon will display when the kill switch is removed from the tiller, which will lead to motor stop. Please attach the kill switch back.</p>
	<p>This icon will display when the system overheats. The motor speed will decrease if this signal is shown.</p>