

4 Connecting the Battery

4.1 Connecting a 48V Battery

⚠ Before connecting to a battery, make sure the main switch is off.

⚠ Avoid short-circuit while connecting batteries.

- ① Connect the main switch cables to the battery.
- ② Connect the main switch cables with the input cables of Driver Module.

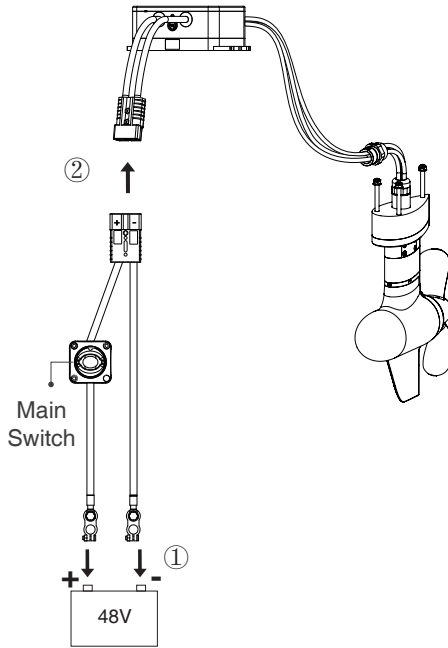


Figure 4-1

💡 For non-NAVY batteries, please configure them by Remote Control for the first time use, otherwise the batteries may not work properly.

💡 The motor will stop if the power cable disconnects.

💡 Rotate the main switch clockwise to power on the battery before use.

💡 The main switch and power cable are connected by screws that may loosen after long-time use. Loosen screws will lead to poor contact. If this problem happens, open the back cover of the main switch, and tighten the screws inside.