

4.2 Connecting a NAVY Battery

⚠ Before connecting, make sure the main switch is off.

⚠ Avoid short-circuit while connecting batteries.

① Connect the main switch cables to NAVY Battery.

② Connect the main switch cables to Driver Module.

③ Connect NAVY Battery and Driver Module by a communication cable.

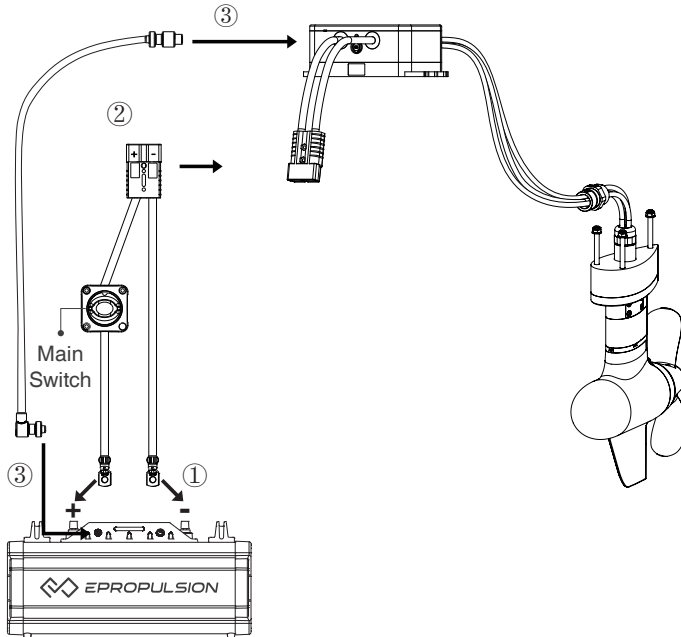


Figure 4-2

⚠ The pod will stop if the communication cable or power cable disconnects.

⚠ Use communication cables to connect NAVY Batteries when multiple NAVY Batteries are used in parallel.

💡 Rotate the main switch clockwise to power on the battery before use.

💡 The main switch and the power cable are connected by the fixing screws that may loosen after long-time use. Loosen screws will lead to poor contact. If this problem is discovered, open the back cover of the switch, and then tighten the screws inside.