

## 9 Stopping the Pod

---

It's recommended to stop the pod as the following procedures.

1. Return the throttle to zero position.
2. Wait until the motor stops, then detach the kill switch.
3. Press and hold the “ ⏻ ” button until the remote control is switched off.
4. Turn off the main switch. If the pod is connected to a NAVY battery, please also turn off the battery by pressing the power button.



The motor will also stop in any below situations.

- 1) Throttle is in zero position.
- 2) Kill switch is not placed in the correct position.
- 3) Main switch is turned off.
- 4) Communication between remote control and driver module breaks.
- 5) Connection between battery and driver module breaks.
- 6) Failure exists in the control system (e.g. motor is blocked or the low battery voltage level is detected).