

6 Battery Charging

Charge the battery when the state of battery level is low or empty. It's recommended to charge the battery after detaching it from the outboard though it's allowed to operate and charge the outboard simultaneously.

Step1: Power off the outboard first. Then disconnect the power cable and detach from the power port. Hold the handle and pull up the battery lock to detach the battery.

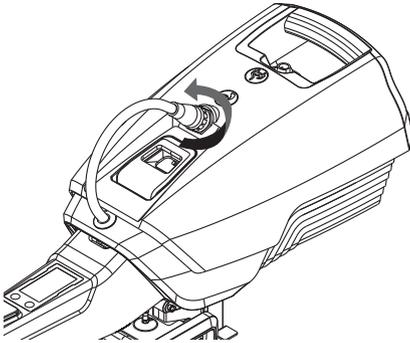


Figure 6-1

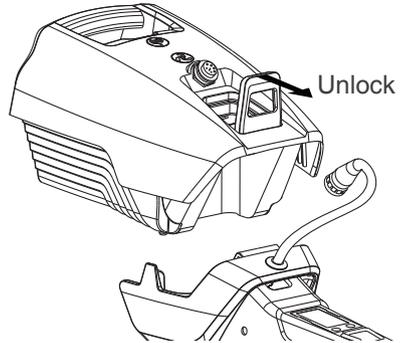


Figure 6-2

Step2: Connect the output cable of battery charger to the battery, then connect the AC power plug of the charger to the 100V~240V wall outlet.

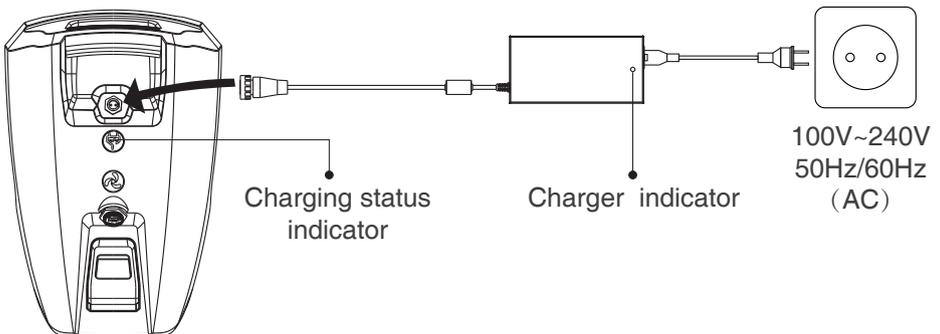


Figure 6-3

Indicator	Normal Status	Description
Charger indicator	Solid red light	The charger has been plugged into the charging port of the battery and it works well.
	Solid green light	The charger works well but has not been plugged into the charging port of the battery, or the battery has been fully charged.
Charging status indicator	Solid red light	The battery is being charged.
	Solid blue light	The battery has been fully charged.

Indicator	Abnormal Status	Description
Charger indicator	Light out	<ol style="list-style-type: none"> 1. Make sure the AC socket has power output. 2. Disconnect the battery with charger, if the charger indicator becomes solid green, there may be a fault in battery, please contact your dealer to change the battery. 3. If the charger indicator is still off after disconnecting with the battery, there may be a fault in charger, please contact your dealer.
Charging status indicator	Light out	<ol style="list-style-type: none"> 1. Disconnect the battery with charger, if the charger indicator becomes solid green (remark for the colour), there may be a fault in battery, please contact your dealer. 2. Disconnect the battery with charger, if the charger indicator is off, there may be a fault in charger or battery, please contact your dealer. 3. After fixing the issues of the charger, please recheck the status of charging indicator. If there are still problems with battery, please contact your dealer.

Step3: Plug the battery charger out of the wall socket after the battery has been fully charged, then disconnect the battery charger port and charger.