

5.4 Use of Kill Switch

- Attach the kill switch and tie its lanyard to your wrist or life jacket.
- Stop the pod drive in emergency by detaching the kill switch.
- To run the motor again, first attach the kill switch then start the motor.

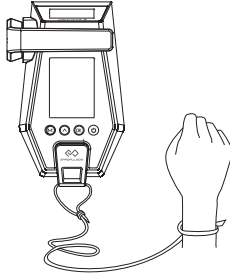


Figure 5-6


- ⚠ The kill switch generates magnetic field. Keep it 50cm / 20inches away from medical implants like pacemakers and magnetic cards (e.g. credit card) as well as other magnetic media.
- ⚠ The magnetic field of the kill switch may interfere with some electronic instruments. Keep it away from these electronic instruments.

5.5 Pairing Remote Control with the Pod Drive

Before use please pair remote control with the pod drive. There are two methods to pair the remote control. Please choose one of the two methods and follow the steps to build new communication.

Method 1. Automatic Pairing without Communication Cable

Step1: Switch off system power and hold the remote control within 0.5m of the driver module.

Step2: Press and hold the “” button to switch on the remote control.

Step3: Press “**OK**” button and hold **5s** to enter the pairing setting page (Figure 5-7). On this page, you can find the blinking “**ADD**” (address) and “**SET**” (set), and a countdown timer “**060**” (60s).